

## Instructions To Use Manual Override For Motorised Ball / Butterfly Valve

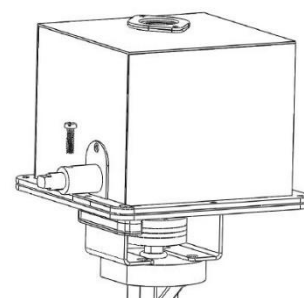
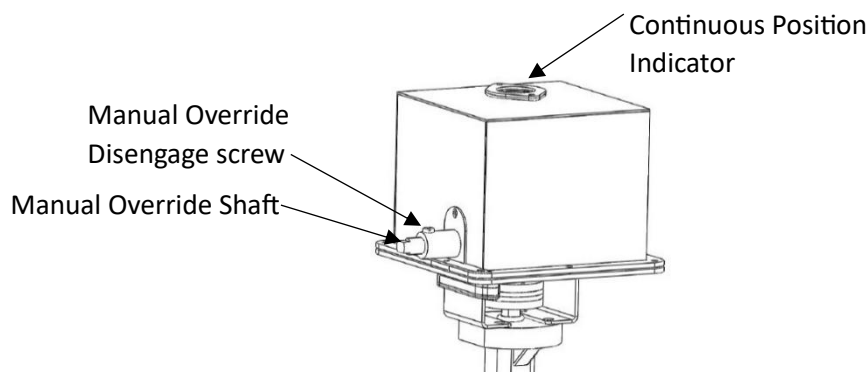


Figure.2

### Manual Override Mode Instructions

1. Use the manual override only when the automatic operation fails. First, disconnect the power supply to the valve.
2. Remove the disengagement screw as shown in Figure 2.
3. Utilize the manual override lever provided in the package to operate the valve manually.
4. Attach the lever to the manual override shaft as illustrated in Figure 3, and rotate it in the direction indicated on the valve cover.
5. Check the top position indicator to determine whether the valve is open or closed.
6. Rotate the shaft gently and stop once the indicator shows either fully open or fully closed.
7. Do not rotate beyond the indicated limits, as it may damage the internal stoppers and gears.

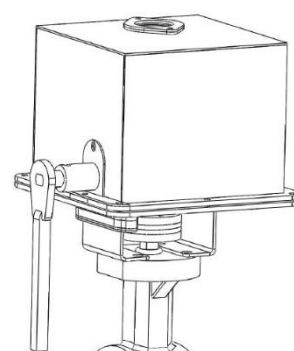


Figure.3

### Automatic Mode Instructions

1. Reinstall the manual override disengaging screw onto the shaft. If the screw doesn't align properly, gently rotate the lever until it can be fastened securely.
2. Once the screw is in place, reconnect the power supply. The valve will now return to normal automatic operation.

### Scan for Instructions & Video

Access detailed user guides and step-by-step videos by scanning the QR code with your phone.

