


## Instructions for Wiring of Solar Powered Timer Controlled Motorized Valves.

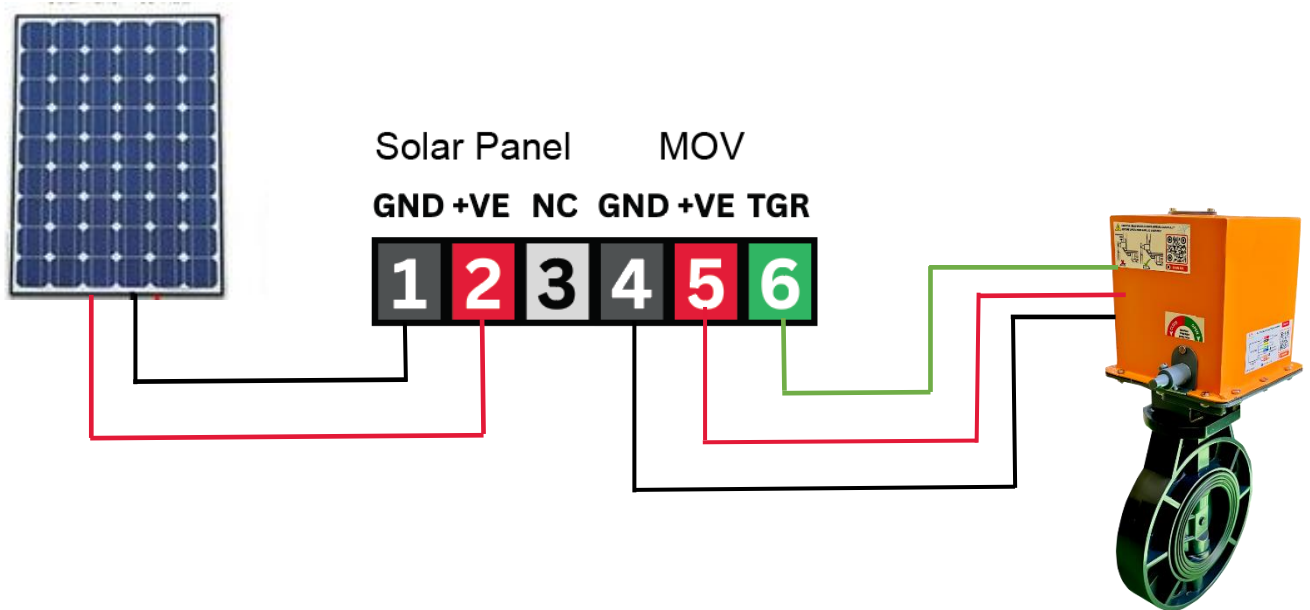

1. Connect to the GND of the Solar Panel (black wire)
2. Connect to the Positive terminal of the Solar Panel (red wire)
3. No connection required
4. Connect to the GND of the Motorized Valve (black wire)
5. Connect to the Positive terminal of the Motorized Valve (red wire)
6. Connect to the Trigger wire of the Motorized Valve (green wire)

**⚠ Important:**

Avoid shorting the terminals or wires, as it may result in damage to the battery.

7. Do not alter the solar charge settings.
8. Turn off the ON/OFF toggle switch when the system is not in use.
9. To manually override the motorized valve, first switch off the output power from the panel.

### Scan for Instructions & Video

Access detailed user guides and step-by-step videos by scanning the QR code with your phone.

